

INSTRUCTION MANUAL

Commercial Idly Maker

Dear Customer,

We are glad to welcome you to the maxel family. At maxel, we make products with precision and at most quality, ensuring that our customers are deriving complete value for their money.

More than making your job effortless, we are delighted that we are assisting you in making the tastiest and healthiest foods every day!

Directions to Use:

- Upon un-wrapping, remove the warranty card from the machine and keep it safe.
- The order to be followed for using the machine is as follows.
 - · Clean the machine with dry cloth.
 - Connect the regulator to the gas cylinder and turn it ON.
 - Add adequate water into the machine.
 - Feed the plates with batter and keep them in place, close and lock door properly.
 - Turn the knob in the machine, lit the burner and wait for 20-30 minutes.
 - Open the door and take the idlies out.
 - Repeat the previous 4 steps for further batches.
 - After the process is over, wash the plates with water.
 - Wipe the machine with wet and dry cloth.
 - Close the knob and regulator after every use.

Do's & Don'ts

- Keep the machine in a flat & non-slippery surface.
- Keep the machine out of the reach of the children.
- Ensure water levels for every batch.
- Ensure regulator connectivity has no gas leakage.
- Change the gas tube regularly to ensure there is no gas leakage.
- Check burners for any blocks periodically for more efficiency.
- Ensure gas connection is closed after every use.
- Do not use the machine before reading this manual.
- Do not open the door when the idlies are cooking.
- Do not use any third party accessory in the machine.
- Do not keep the burner lit for so long when not in use.
- Do not wash the machine directly with hoses. Please wipe it with wet and dry cloth.



Manufactured by:

Lakshmi Engineering Products

No.31, Puliakulam Main Road, Coimbatore - 641045, Tamil Nadu, India. Website : www.maxelplus.com Email : customercare@maxelplus.com

Customer Care Number : +91 (422) 4351519