



INSTRUCTION MANUAL
Commercial Vegetable Cutter

Dear Customer,

We are glad to welcome you to the maxel family. At maxel, we make products with precision and at most quality, ensuring that our customers are deriving complete value for their money.

More than making your job effortless, we are delighted that we are assisting you in making the tastiest and healthiest foods every day!

Directions to Use:

- Upon un-wrapping, remove the warranty card from the machine and keep it safe.
- The order to be followed for using the machine is as
 - Clean the machine with dry cloth.
 - Check if throw disc is placed properly.
 - Select the appropriate blade size and shape, place it above the throw disc, rotate it clockwise for locking. After placing required blades, close the top door and lock it.
 - If dicing has to be done, that particular dicer blade has to be placed first followed by the corresponding slicer on the top of it. For this combination and for grating, the vegetables can be inserted in any manner from top.
 - If slicing alone has to be done, the vegetables must be inserted vertically from the top. In case of French fry / finger chips, the vegetables has to be inserted horizontally in the top vent.

- Choose the input port out of the two, depending upon the size and shape of the vegetable and use the same.
- Repeat the previous 4 steps for further batches.
- After the process is over, open the top door by unlocking it, rotate the blades slightly in CCW direction and lift it to take them out.
- Clean the blades with water and machine with wet and dry cloth.
- Lock the machine at the end after every use.

Do's & Don'ts

- Keep the machine on a flat & non-slippery surface.
- Keep the machine out of the reach of the children.
- Ensure all screws are tightened in all blades before every use.
- Ensure safe handling for blades as they are extremely sharp.
- Do not use the machine before reading this manual.
- Do not run the machine empty for more than 10 seconds.
- Do not try to wash the machine directly with hoses. Use wet or dry cloth to wipe it.
- Do not insert your hands either inside the outlet area or inside the top vent when the machine is running. This will cause severe injury.
- Do not run the machine without proper earthing.
- Do not feed the machine with vegetables, before turning ON the machine.

- Do not overload the machine beyond its capacity.
- Do not use any third party accessory in the machine.



Manufactured by:

Lakshmi Engineering Products

No.31, Puliakulam Main Road,
Coimbatore - 641045, Tamil Nadu, India.

Website : www.maxelplus.com

Email : customercare@maxelplus.com

Customer Care Number : **+91 (422) 4351519**