



INSTRUCTION MANUAL

Commercial Rice Washer

Dear Customer,

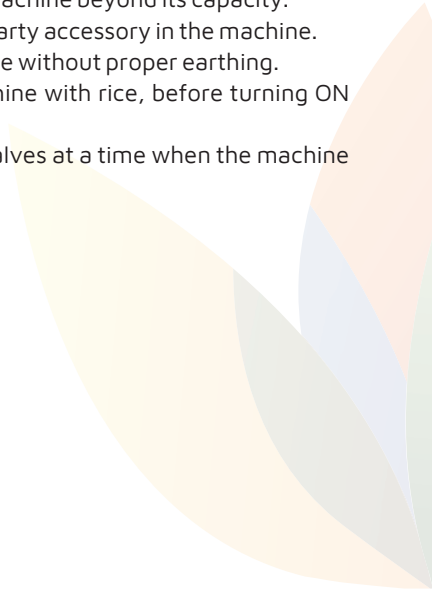
We are glad to welcome you to the maxel family. At maxel, we make products with precision and at most quality, ensuring that our customers are deriving complete value for their money.

More than making your job effortless, we are delighted that we are assisting you in making the tastiest and healthiest foods every day!

Directions to Use:

- Upon un-wrapping, remove the warranty card from the machine and keep it safe.
- The order to be followed for washing is as follows.
 - Clean the machine with dry cloth.
 - Connect the motor's output to the machine's inlet hose collar & water source to it's input.
 - Close the drain and outlet valves and open the cleaning valve.
 - Switch on the machine.
 - Feed the rice gradually and wait for 5 minutes.
 - After keeping collection drum in place, open output valve, close cleaning valve and wait till all washed rice comes out.
 - Now open drain valve and close the outlet valve and wait till water is drained.
 - Repeat the previous 5 steps for further batches.
 - Wipe both drums with dry cloth.

Do's & Don'ts

- Keep the machine on a flat surface & non-slippery surface.
 - Keep the machine out of the reach of the children.
 - Ensure the drain of the machine is well connected.
 - Do not use the machine before reading this manual.
 - Do not run the machine empty for more than 10 seconds.
 - Do not try to wash the machine directly with hoses. Use wet or dry cloth to wipe it.
 - Do not put hands inside the drum when the machine is running.
 - Do not overload the machine beyond its capacity.
 - Do not use any third party accessory in the machine.
 - Do not run the machine without proper earthing.
 - Do not feed the machine with rice, before turning ON the machine.
 - Do not close all the valves at a time when the machine is running.
- 



Manufactured by:

Lakshmi Engineering Products

No.31, Puliakulam Main Road,
Coimbatore - 641045, Tamil Nadu, India.

Website : www.maxelplus.com

Email : customercare@maxelplus.com

Customer Care Number : **+91 (422) 4351519**